



# Optimol SRV

SRV is an abbreviation for Schwingung Reibung Verschleiß which is German for reciprocating friction and wear.

- Tribological studies on lubrication
- Studies of Friction and wear at elevated temperatures
- Tribological studies on different materials and solid lubricants




Linear motion

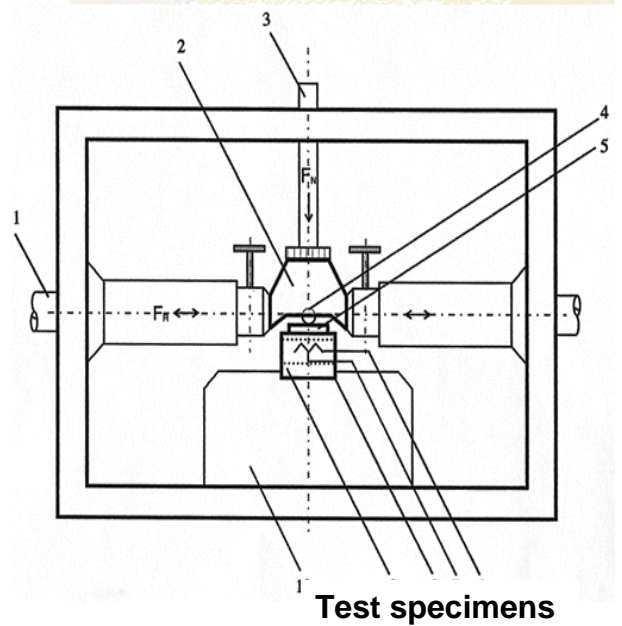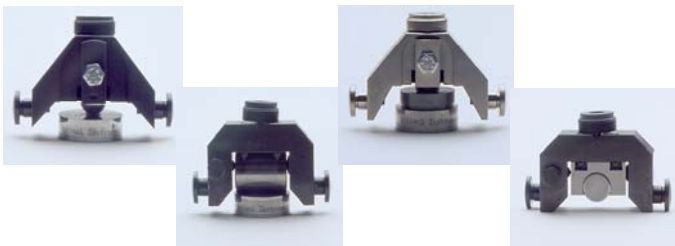

## TECHNICAL SPECIFICATIONS

- Load:** 1 – 2000 N
- Frequency:** 1 – 511 Hz
- Stroke:** 0.2 – 4 mm
- Temperature:** ambient to +900 °C

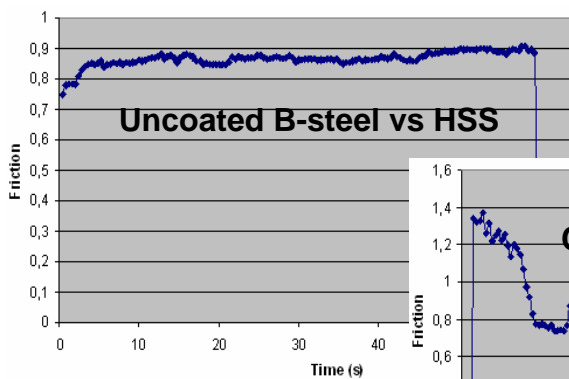

Friction at 800 °C

